

PARTS TABLE

ITEM	PARTS NO.	QTY.	DESCRIPTION
1	UH-2201	1	PLUG
2	UH-2202	1	PUSHER
3	UH-2203	1	FEED HOPPER
4	UH-2204	3	HEX SCREW (M5x30)
5	UH-2205	1	FEED HOPPER TUBE
6	UH-2206	1	OPENING TUBE
7	UH-2207	3	HEX SCREW (M5x30)
8	UH-2208	1	OUTLET FIXED PIN
9	UH-2209	1	OUTLET
10	UH-2210	1	STAINLESS PIN (Ø4x16)
11	UH-2211	1	FEED SCREW(SINGLE SIDE BLADE)
12	UH-2212	1	INSERT (SQUARE)
13	UH-2213	1	BLADE
14	UH-2214	1	EXTRUSION PLATE 6.2 mm (STANDARD)*
15	UH-2215	1	RING NUT
16	UH-2216	1	TUBE
17	UH-2217	2	RUBBER PLUG
18	UH-2218	1	FEED HOPPER ATTACHMENT
19	UH-2219	1	NUT (M8)
20	UH-2220	1	HEX SCREW (M10x15)
21	UH-2221	1	WASHER (M10x20)
22	UH-2222	2	WASHER (M8x16)
23	UH-2223	2	HEX SCREW (M8x15)
24	UH-2224	1	MAIN BODY
25	UH-2225	1	WARNING LABEL
26	UH-2226	1	DANGER LABEL
27	UH-2227	1	DATA PLATE
28	UH-2228	1	CONTROL PANEL
29	UH-2229	1	START BUTTON
30	UH-2230	1	STOP BUTTON
31	UH-2231	1	REVERSE BUTTON

Note: Please consult us first for different size EXTRUSION PLATES.

PARTS TABLE

ITEM	PARTS NO.	QTY.	DESCRIPTION
32	UH-2232	1	RUBBER PAD
33	UH-2233	1	SCREW (M12)
34	UH-2234	1	DANGER LABEL
35	UH-2235	1	ELECTRIC SHOCK WARNING LABEL
36	UH-2236	2	SCREW (M5x12)
37	UH-2237	1	CAPACITOR ATTACHMENT
38	UH-2238	1	*CAPACITOR (FOR SINGLE PHASE USE ONLY)
39	UH-2239	1	BUSHING
40	UH-2240	1	BALL BEARING 6204zz
41	UH-2241	1	OIL SEAL (TC-47x30x10)
42	UH-2242	1	KEY WAY (5x5x15)
43	UH-2243	1	TRANSMISSION SHAFT
44	UH-2244	1	STRAIN RELIEVER PG 13.5
45	UH-2245	1	CORE
46	UH-2246	1	POWER PLUG (3 PH)
47	UH-2247	6	HEX SCREW (M6x20)
48	UH-2248	6	SPRING WASHER (M6)
49	UH-2249	1	GEAR REAR COVER
50	UH-2250	1	OIL SEAL PAD
51	UH-2251	2	PIN (Ø6x20)
52	UH-2252	1	BALL BEARING 6203
53	UH-2253	1	NUT (AN-D4)
54	UH-2254	1	WASHER (AN-D4)
55	UH-2255	1	TRANSMISSION GEAR 50HZ (58T)
	UH-2255-1	1	TRANSMISSION GEAR 60HZ (57T)
56	UH-2256	1	BUSHING
57	UH-2257	1	BALL BEARING 6204Z
58	UH-2258	1	BAL BEARING 6203
59	UH-2259	1	KEY WAY (5x5x15)
60	UH-2260	1	TRANSMISSION SHAFT 50HZ (20T)
	UH-2260-1	1	TRANSMISSION SHAFT 60HZ (17T)
61	UH-2261	1	TRANSMISSION GEAR 58T
62	UH-2262	1	BALL BEARING 6203

PARTS TABLE

ITEM	PARTS NO.	QTY.	DESCRIPTION
63	UH-2263	1	HEX SCREW (6x20)
64	UH-2264	1	WASHER (M6x25)
65	UH-2265	1	SPRING WASHER (M6)
66	UH-2266	1	MOTOR GEAR (20T)
67	UH-2267	1	OIL SEAL (28x20x6)
68	UH-2268	1	*CAPACITOR (FOR SINGLE PHASE USE ONLY)
69	UH-2269	1	MOTOR BODY
70	UH-2270	1	BALL BEARING 6024ZZ
71	UH-2271	1	MOTOR COIL
75	UH-2275	1	MOTOR SHAFT & CORE
72	UH-2272	1	KEY WAY (5x5x5)
73	UH-2273	4	SPRING WASHER (M5)
74	UH-2274	4	SCREW (M5x10)
76	UH-2276	1	BALL BEARING 6203ZZ
77	UH-2277	1	MOTOR REAR COVER
78	UH-2278	3	SCREW (M5x10)
79	UH-2279	1	PLANTINUM SWITCH (FOR SINGLE PHASE USE ONLY)
80	UH-2280	2	SCREW (M5x10)
81	UH-2281	1	SWIRL SWITCH (FOR SINGLE PHASE USE ONLY)
82	UH-2282	1	COOLING FAN
83	UH-2283	1	IC CONTROL PLUG & CORE
84	UH-2284	1	IC BOARD
85	UH-2285	4	SCREW (M3x6)
86	UH-2286	4	BRONZE PIN (M3x5)
87	UH-2287	1	ELECTRIC BOARD
88	UH-2288	4	SCREW (M5x14)
89	UH-2289	4	SPRING WASHER (M5)
90	UH-2290	1	BASE
91	UH-2291	4	BUTTOM RUBBER KNOBS
92	UH-2292	4	RUBBER WASHER (Ø8x16)
93	UH-2293	4	SUPPORT PIN (M8x20)
94	UH-2294	4	WASHER (M8x20)
95	UH-2295	4	NUT (M8)

PARTS TABLE

ITEM	PARTS NO.	QTY.	DESCRIPTION
96	UH-2296	1	OVERLOAD RELAY
97	UH-2297	1	OVERLOAD RELAY ATTACHMENT
	UH-2297-1	1	TRACK
98	UH-2298	4	HEX SCREW (M5x12)
99	UH-2299	4	SPRING WASHER (M5)

Note: The specification of UH-2238 will be different subject to the voltage and frequency. Please indicate the voltage and frequency when ordering.

Note: The specification of UH-2268 will be different subject to the voltage and frequency. Please indicate the voltage and frequency when ordering.

OPTIONAL 1/2 UNGER (DOUBLE-CUT BLADE) ASSEMBLY

ITEM	PARTS NO.	QTY.	DESCRIPTION
100	UH-22100	1	OUTLET
101	UH-22101	1	STAINLESS PIN
102	UH-22102	1	FEED SCREW
103	UH-22103	1	INSERT (ROUND)
104	UH-22104	1	EXTRUSION PLATE (LARGE HOLES)
105	UH-22105	1	DOUBLE-CUT BLADE SET
106	UH-22106	1	EXTRUSION PLATE 4.5 mm (STANDARD)
107	UH-22107	3	BLADE (DOUBLE-CUT USE)
108	UH-22108	3	M5*0.8 SCREW