

# **IMPORTANT INSTALLATION INFORMATION**

**SMAKYMIXERS MODELS: SM-30HI, SM40HI, SM60HI, SM-B80HI AND SM-A80HI ARE WITH 3-PHASE AND MUST BE INSTALLED BY QUALIFIED TECHNICIAN/ELECTRICIAN:**

**THE ROTATION OF THE PLANET MUST BE CHECKED AFTER INSTALLATION AND BEFORE MIXER IS TAKEN INTO USE.**

**THE PLANET SHAFT MUST ROTATE CLOCKWISE: TOWARDS THE DIRECTION OF THE ARROW ON THE PLANET! The tool must rotate in the opposite direction from the planet.**

**IF MIXER ROTATES IN THE WRONG DIRECTION, SOUNDS STRANGE AND/OR SPEED DOES NOT CHANGE WHEN CHANGING SPEED WITH THE LEVER CHECK THE WIRE CONNECTIONS AND SWITCH 2 PHASES, SO MIXER ROTATES CORRECTLY. IF PROBLEMS PERSIST, CHECKA THAT ALL 3 FUSES ON THE WALL ARE OK.**

**USE OF MIXER WITH PLANET ROTATING IN WRONG DIRECTION OR WRONGLY CONNECTED WILL SERIOUSLY DAMAGE THE MIXER, AND THE WARRANTY BECOMES INVALID.**