

SM-800A SPEED SELECTION

Before changing speeds, the mixer must always be stopped. The necessary speed can then be selected before restarting the machine by pressing the red start button.

The speed selected depends largely on the quantity and consistency of the product. It is recommended that mixing is always started at the lowest speed and progressively increased to the desired speed. In an emergency situation always use the red emergency stop button to stop the machine.

Table 2 shows the recommended speeds for the range of tools.

	Recommended Speed		
	1st gear	2nd gear	3rd gear
Whisk	—————▶		
Beater	—————▶		
Hook	————▶		

Table 2